

RocketPort[®] Serial Hub (RPSH) and VS1000/VS1100 Driver Installation with Windows[®] 95/98

How to Use this Document

You can use the interactive Table of Contents to locate the information you need.

Driver Requirements

This document discusses installing and configuring the RocketPort Serial Hub and VS1000 device driver for the Windows 9x platform. The RocketPort Serial Hub or VS1000 requires at least one host server running Windows 95 or Windows 98.

Note: The driver for the **RocketPort Serial Hub Si** is different than the driver for the **RocketPort Serial Hub/VS1000** and they are **NOT** interchangeable.

For hardware specific information or the product overview, see the <u>Hardware Installation</u> documentation that is available on the Comtrol media (diskette or CD) shipped with your product or download the current version from the ftp/web site.

<u>Driver updates</u> can be downloaded at no charge from the Comtrol ftp/web site. Always check the web or ftp sites to make sure that you have the current driver and documentation. Software downloaded from the ftp/web site are self-extracting zipped files that you must extract before installing.

Connectivity Requirements

An Ethernet connection (10 Mbps), either to an Ethernet hub or to a network interface card (NIC) in the host server. See the *Hardware Installation* documentation for information regarding hardware installation, including building crossover cables.

Note: If connecting the RocketPort Serial Hub or VS1000 directly to the server NIC card, an **Ethernet** crossover cable is required.

Interactive Table of Contents


1
1
1
3
9
17
19
19
19
19
19
19
20
22

Installing the Device Driver

Use the following procedure to initially install the RocketPort Serial Hub (RPSH) or VS1000/VS1100 software. See the *Removing the Driver* discussion before re-installing a driver.

Note: You may need to extract the driver files to a subdirectory on your system or a diskette. Drivers on the Comtrol CD and downloaded from the ftp/web site are self-extracting zip files.

1. Open the Control Panel and double-click on the Add New Hardware icon.

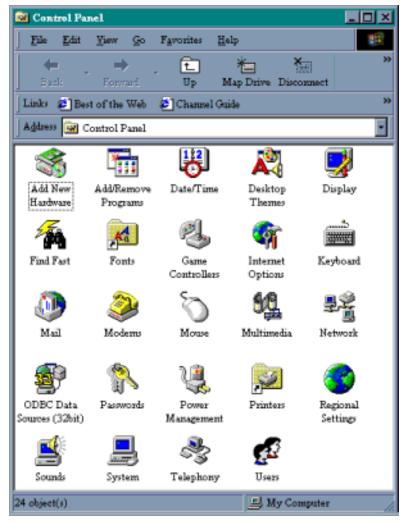

Note: This document illustrates a version of Windows 98 screens. Windows 95 is similar and you may have to make slightly different selections.

2. If **Windows 98**, select Next at the first screen and Next when it wants to search for Plug and Play devices. If **Windows 95**, select No at the *Do you want Windows to search for your new hardware?* prompt.





3. Select No, the device isn't in the list and the Next button.



4. Select No, I want to select the hardware from a list and the Next button.




5. Highlight Multi-function adapters and select Next.




6. Select the Have Disk button.




7. Select the Browse button.

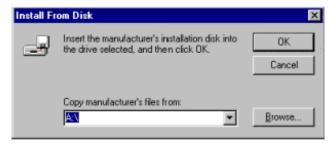

8. Highlight the directory where the unzipped driver files are located and select the **OK** button. For example:

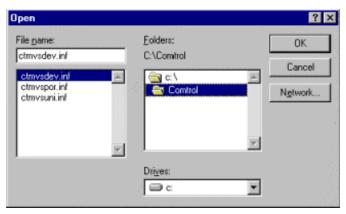

9. Select the OK button.

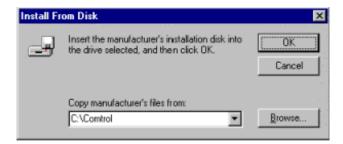

10. Highlight the Comtrol device you want to install and select the Next button.



Note: This driver does not support the VS2000.

11. Select Finish.



12. Select Yes to the restart your computer query.



After rebooting your system, a new hardware wizard appears for each port on the device and the Comtrol VS1000 and RocketPort Serial Hub proram group appears.

13. Close the program group window.



14. Select Yes when this message appears.




15. Go to Step 7 on Page 11 to configure the device.


Configuring the Device

Use the following procedure to configure the device and it's properties. You must configure device properties for the device to function. You can also use this procedure to change device or port properties any time.


- 1. Right-click on the **My Computer** icon and select the **Properties** button or open the Control Panel and double-click on the System icon.
- 2. Select the Device Manager tab.
- 3. Double-click on Multi-function adapters.
- 4. Highlight the device you want to configure and select the Properties button.

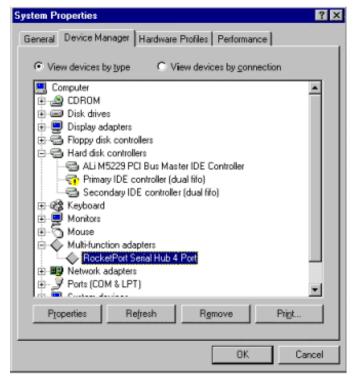

5. Select the Device Setup tab.

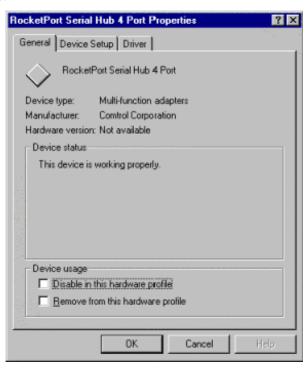

6. Select the Configure button.

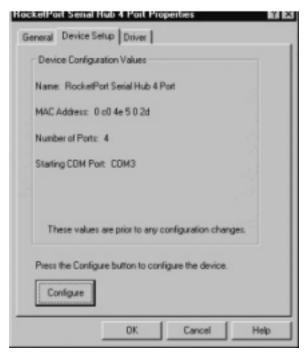

Note: If you see a **Setup** button instead of a **Configure** button, select the **Setup** button.


7. Highlight the device for which you want to configure and select the **Properties** button.



8. Enter the following into the Device Properties screen:

Note: For information on any field definitions, use the Help button or the ? in the title bar.

- Optionally, enter a different device name.
- Enter the MAC address for the device. The MAC address is located on a sticker on the bottom of the RocketPort Serial Hub or on the back panel of the VS1000.
- Optionally, change the starting COM port number.

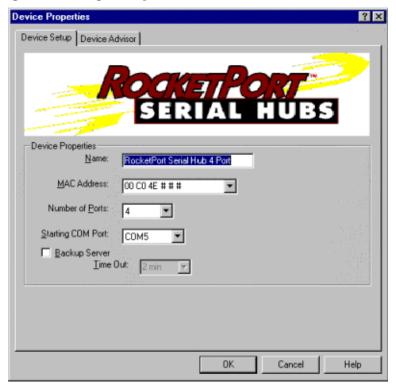


Note: The screen for the VS1000 displays a different graphic.

9. After entering the device properties, select the **OK** button. The Main Setup screen appears:




- 10. Optionally, select the Options tab to set any of the following device features:
 - Small send windows
 - Scan rate
 - RS-485 mode (convertor box required)

Note: Use the Help button or the ? in the title bar for definitions of features.

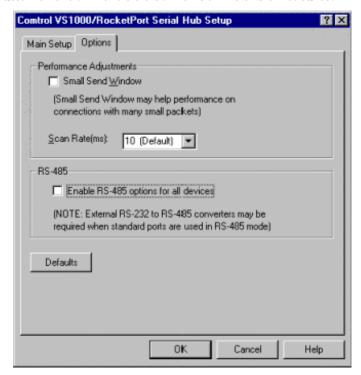

- a. Select the options you want to enable.
- b. Select the Main Setup tab.

- 11. Optionally, highlight the port that you want to configure and select the **Properties** button You can configure port for the following features:
 - · Overriding and locking the baud rate
 - Lock baud rates
 - Set a timeout time on transmit data on a port
 - Map CD to DSR
 - Map 2 stop bits to 1
 - · Wait for physical transmission before write
 - Clone port settings

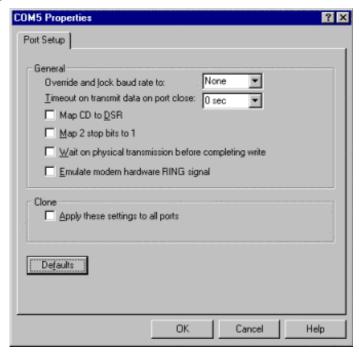

Note: Use the Help button or the ? in the title bar for detailed information regarding these fields.

If you enabled RS-485 mode in the $Device\ Options\ tab$, an $RS-485\ tab\ exists$ in the COM Port Properties window. The RS-485 tab allows you to:

- Override and lock RS-485 toggle mode
- Toggle RTS low


12. After completing all necessary configuration, select the Ok button to close the Main Setup screen.



13. Select Ok in the Port Properties screen.



14. Select Ok in the System Properties screen.

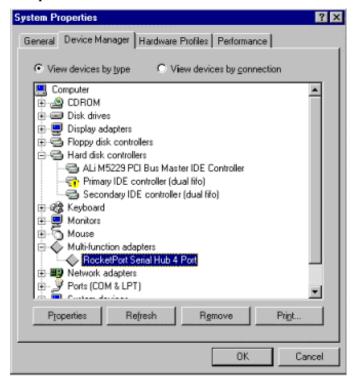


15. If you have not done so, install the hardware and connect your peripheral devices. See the Configuring Modems discussion to install a modem on a port.

Configuring Modems

The RocketPort Serial Hub can support any asynchronous serial modem for use by any application that uses Windows 95/98 COM ports.

Follow these steps to install and configure modems.

- 1. Connect the modem(s) to the desired port(s).
- 2. Power up the modem(s).
- 3. Open the Control Panel window.
- 4. Double-click on the Modems icon. The Install New Modem wizard starts:

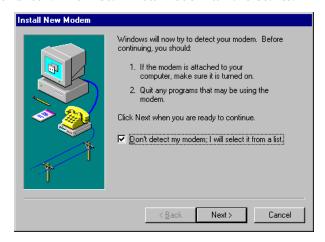


Note: Screen appearances may differ slightly between different versions of the operating systems. You may need to adapt as necessary.

5. Check the "Don't detect my modem" box.

Note: Do **not** use the auto-detect feature. The Windows modem auto-detect function does not recognize ports above COM10, and it scans **down**, beginning with the highest detected COM port. This can produce extremely confusing modem-to-port numbering and naming sequences.


6. Click Next. A list of modem manufacturers and models displays:

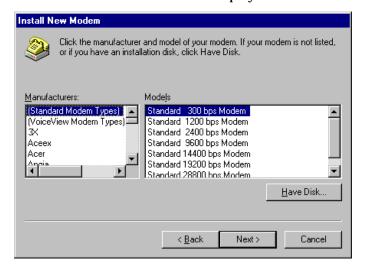

7. Select the manufacturer and modem type from the list or click Have Disk.

Configuring Modems 17

8. Click Next. The list of available ports displays:

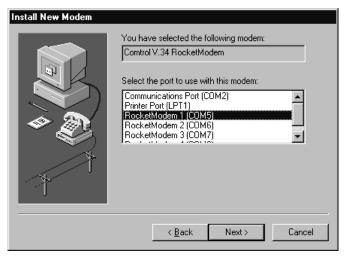

- 9. Select the port to which the modem is attached and click Next. The system installs the modem software.
- 10. Click Finish. The Modems Properties window displays:



- 11. To add more modems, click the Add button and repeat Steps 4 through 9.
- 12. Optionally:
 - a. Click Dialing Properties to configure basic phone service information.
 - b. Highlight a modem and click Properties to configure port speed, data bits, parity, and so on.
 - c. Click the Diagnostics tab, then select a port and click More Info to query and test the modem.
- 13. When you are done, click Close or (Ok, depending on the operating system version) to exit the Install New Modem wizard. Your changes take effect immediately. No reboot is required.

Configuring Modems 18

Verifying the Ports are Available

Use the following procedure to verify that the COM ports are available to Windows 98:

- 1. Right-click on the My Computer icon.
- 2. Select Properties.
- 3. Select the Device Manager tab.
- 4. View your system's ports by clicking on the plus (+) sign for Ports (COM & LPT).

Troubleshooting

If you are having problems, you can try the following:

- 1. Verify that you are using the correct types of cables, see the <u>Hardware documentation</u> for pin out information.
- 2. Verify that all cables are connected securely.
- 3. Reboot the server.
- 4. Verify that you are addressing the port correctly. In many applications, device names above COM9 require the prefix \\.\ in order to be recognized. For example, to reference COM10, use \\.\COM10 as the file or port name.
- 5. Use the Test Terminal program (WCOM32) to troubleshoot communications on a port-by-port basis.
- 6. Remove and reinstall the driver.

Removing the RocketPort Serial Hub or VS1000/VS1100

There are two steps to removing a RPSH/VS1000.

- If you want only to remove a device, follow *Removing a Device*.
- If you want to completely remove the device and driver, first follow *Removing a Device*, then <u>Removing the Driver</u>.

Removing a Device

- 1. Follow <u>Steps 1</u> through 5 in the <u>Configuring the Device</u> discussion.
- 2. Highlight the device you want to remove and select **Remove**.
- 3. Close the Device Manager.

Removing the Driver

To remove the Comtrol Windows 95/98 device driver:

- 1. Follow <u>Steps 1</u> through 5 in the <u>Configuring the Device</u> discussion.
- 2. Select Add/Remove Programs.
- 3. Select Comtrol Serial Port Tools.
- 4. Select the **Add/Remove** button.
- 5. When the process is complete, select \mathbf{OK} to exit.

Installing Additional Devices

Use the *Installing the Device Driver* discussiong to add an additional device.

Using Test Terminal (WCOM32) to Test Ports

Test Terminal (WCOM32) is a terminal program that enables you to open a port, send characters and commands to the port, and toggle the control signals.

Use the following procedure to run Test Terminal to test the RocketPort USB Serial Hub ports.

1. To start the Test Terminal (WCOM32), select Test Terminal from the Comtrol program group. The program window displays:



- 2. Select Open Port from the Port menu. A list of possible COM port numbers displays.
- 3. Select the COM port you want to test, for example, COM5.

Note: Signals displayed in gray and lowercase are inactive and green uppercase signals are active.



Note: If the COM port does not exist or if it is currently being used by another program, a Create File Error message displays.

4. Place a loopback plug on the COM port you want to test. Make sure all connectors are seated firmly. If you need to build loopback plugs, see the *Hardware documentation*.

5. From the Port menu, select Send Test Data. The program sends out a repeating data stream.



Note: If the loopback plug is in place and the port is working correctly, the test data should be echoed back to the screen. If the loopback plug is not in place or the port is not working correctly, no data or garbled data is echoed back to the screen. If no characters appear, try putting the loopback plug on an adjacent port. It may be that you have the ports mixed up.

- 6. To stop sending data, uncheck the Send Test Data option.
 - **Note:** It takes a few moments for the buffer to empty and the data to stop displaying on the screen.
- 7. If further testing is required, select Loopback Test from the Port menu. If the loopback plug is in place and the port is working correctly, the system displays:



Note: If the loopback plug is not in place or the port is not working correctly, the system returns a "Failed" message.

Contacting Technical Support

Comtrol has a staff of support technicians available to help you. Before you call, please have the following information available:

- Model number
- Serial number
- · Operating system type and release
- Device driver version
- PC make, model, and speed

Comtrol	Headquarters	Europe
Phone	(763) 494-4100	+44 (0)1869 323220
FAX	(763) 494-4199	+44 (0)1869 323211
Email	support@comtrol.com	support@comtrol.co.uk
web site	www.comtrol.com	www.comtrol.co.uk
ftp site	<u>ftp.comtrol.com</u>	

First Edition, December 12, 2000 Copyright © 2000 Comtrol Corporation All Rights Reserved.

RocketPort is a registered trademark of the Comtrol Corporation. Other product and company names mentioned herein may be the trademarks of their respective owners.

Comtrol Corporation makes no representations or warranties with regard to the contents of this reference card or to the suitability of any Comtrol product for any particular purpose. Specifications subject to change without notice. Some software or features may not be available at the time of publication. Contact your reseller for current product information.

Document Number: 2000060 Rev A